


WARDROBES2U

MEASURED BY U - DELIVERED 2U

CUSTOM SLIDING WARDROBE DOORS

HOW TO INSTALL SLIDING WARDROBE DOORS

A step by step guide to fitting your custom sliding wardrobe doors. The same steps apply whether you have two, three or four doors. Most installs take under two hours. For the best finish we recommend professional installation, especially on large, mirrored or multi-panel doors.

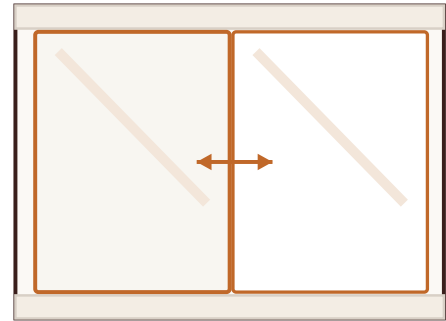

 TWO PERSON JOB

 UNDER 2 HOURS FOR MOST INSTALLS

 SUITS 2, 3 & 4 DOORS

 PROFESSIONAL INSTALL AVAILABLE



Before you start

SAFETY FIRST

-  This is a two person job. Sliding doors are heavy and awkward to handle, so always lift with help.
-  Wear safety glasses when drilling and gloves when handling the doors.
-  Do not install damaged, chipped or cracked glass panels.
-  Do not force the doors, tracks or wheel adjustments.
-  Take care on the step ladder and keep the work area clear.
-  Fix the tracks firmly so the doors can't come loose or fall.
-  Not confident? Add Professional Install in the online builder when you order.

IN YOUR KIT

-  Door panels (2, 3 or 4) depending on your wardrobe layout
-  Top and bottom tracks plus end caps
-  Fixing screws
-  Wheels are already fitted to the doors
-  Floor batten and installation kit, if you added them to your order

TOOLS YOU'LL NEED

-  Drill with a 3 mm drill bit, or a Phillips screwdriver
-  Step ladder, tape measure and pencil
-  Spirit level
-  Suitable adhesive or silicone (tiled floors, if needed)

1

Prepare the tracks

Pre-drill fixing holes along the top and bottom tracks, about **100 mm in from each end** and roughly **every 600 mm** in between. Then push an end cap onto each end of both tracks.



~600 mm APART



Check the fit: before fixing anything, sit both tracks in the opening with the end caps on to make sure they fit between the side jambs.

2

Fix the tracks

Fix the **top track first**, flush with the front edge of the opening, then fix the **bottom track** to the floor directly below it. Keep the end caps hard against the side jambs.



TOP TRACK

BOTTOM TRACK



Carpet or uneven floor? Fix the bottom track to a floor batten so it sits on a solid, level base. Battens are available in the online builder.




Tiled floor? Avoid drilling through tiled or waterproofed areas unless you're qualified to do so. A suitable adhesive or silicone fixing may be needed.

3

Hang the doors

Start with the **rear door**. Tilt it up and locate the top into the back channel of the top track, then lower the wheels into the groove on the bottom track. Work forward, repeating for each door. Same steps for **two, three or four**.

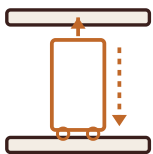

Tip: face the door overlap away from the room entrance, so you don't see the gap.

4

Adjust and check

Wind the wheel adjusters up or down with a screwdriver until each door sits **plumb** against the jamb with an even gap top to bottom. Slide the doors back and forth to make sure they run freely, then wipe the panels clean. That's the job done.



OUT OF LEVEL



PLUMB & EVEN



Gap not even? Small turns of the wheel adjusters fix most out of square alignments.



Stuck on a step?

Email us a photo before forcing anything, or give us a call. We're happy to talk you through it.



hello@wardrobes2u.com.au



0494 649 572



wardrobes2u.com.au

For best results, Wardrobes2U recommends professional installation, especially for large or mirrored doors. These instructions are a general guide only. Site conditions vary. Customer installation is carried out at your own risk. Wardrobes2U is not responsible for damage, injury, incorrect installation or site issues where installation is completed by the customer.