

WARDROBES2U

MADE TO MEASURE - DELIVERED 2U

CUSTOM SLIDING WARDROBE DOORS


HOW TO MEASURE SLIDING WARDROBE DOORS

Measure the opening only. We work out the door and track sizes for you. It takes about five minutes with a tape measure and a spirit level.

✓ MILLIMETRES ONLY


✓ MEASURE TWICE, ORDER ONCE

✓ ENTER ALL FOUR MEASUREMENTS

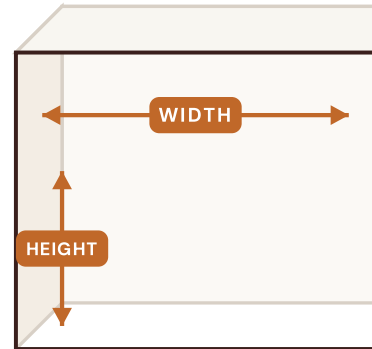

1 Measure the width

Measure the opening width **wall to wall** (or architrave to architrave if your opening has trims), in **two places**: near the top and near the bottom, just above the skirting. Write both down.

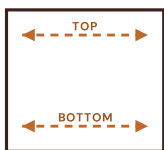

Top width

mm

Bottom width

mm


Skirting boards: measure above them, not over them. Where skirting runs into the opening it will need to be removed where the track and side jambs sit, before the doors are installed.



If the two widths differ by more than **10 mm**, your opening may be too out of square. Email us a photo before you order.

2 Measure the height

Measure the opening height from the **finished floor to the underside of the top** (ceiling, bulkhead or head trim), in **two places**: the left side and the right side. Write both down.

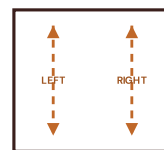

Left height

mm

Right height

mm

Changing the flooring? Measure after the new floor is laid where possible, so the height allows for it. If that is not possible, measure to the existing floor and tell us the new floor thickness.



Enter all four measurements in the online builder exactly as you took them. Don't average or round them. We look over every order before manufacture.

3

Check internal drawers clear the doors

Sliding doors only open across part of the opening at a time. If you have internal drawers, baskets or cupboard doors, make sure they can open while a sliding door is in front of the next section.




- ☐ I've checked any internal drawers or baskets
- ☐ They open without hitting a sliding door

4

Check the floor

Rest a spirit level where the bottom track will sit and check across the full opening. On carpet, soft underlay or uneven floors you may need a **floor batten** so the track has a solid, level base.

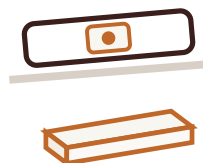

FLOOR BATTEN

- ☐ The floor is level across the opening
- ☐ My floor is carpeted, soft or uneven, so I'll add a floor batten to my order



If the floor is more than **10 mm** out of level, email us a photo before ordering.

5

Final check, then order

Run through this list before you order. If anything looks off, **email a photo** of your opening and we'll help.

- | | |
|---|--|
| ☐ I have two width measurements (top and bottom), in millimetres | ☐ I have two height measurements (left and right), in millimetres |
| ☐ I have double-checked all four measurements | ☐ My opening is no more than 2700 mm high and 4199 mm wide |
| ☐ Internal drawers and baskets clear the doors | ☐ The floor is level within 10 mm, or I've added a floor batten |

Ready to go. Enter your four measurements in the online builder, choose your door style, frame colour and inserts, then place your order. Bigger than 2700 mm high or 4199 mm wide? Call us on **0494 649 572** and we'll help.



Not sure?

Email us a photo of your opening before ordering, or **book a FREE 15 Minute Design Call.**

✉ hello@wardrobes2u.com.au

☎ 0494 649 572

🌐 wardrobes2u.com.au